


Master Cabinet

RS232 Cable (Master Cabinet Pin-out)

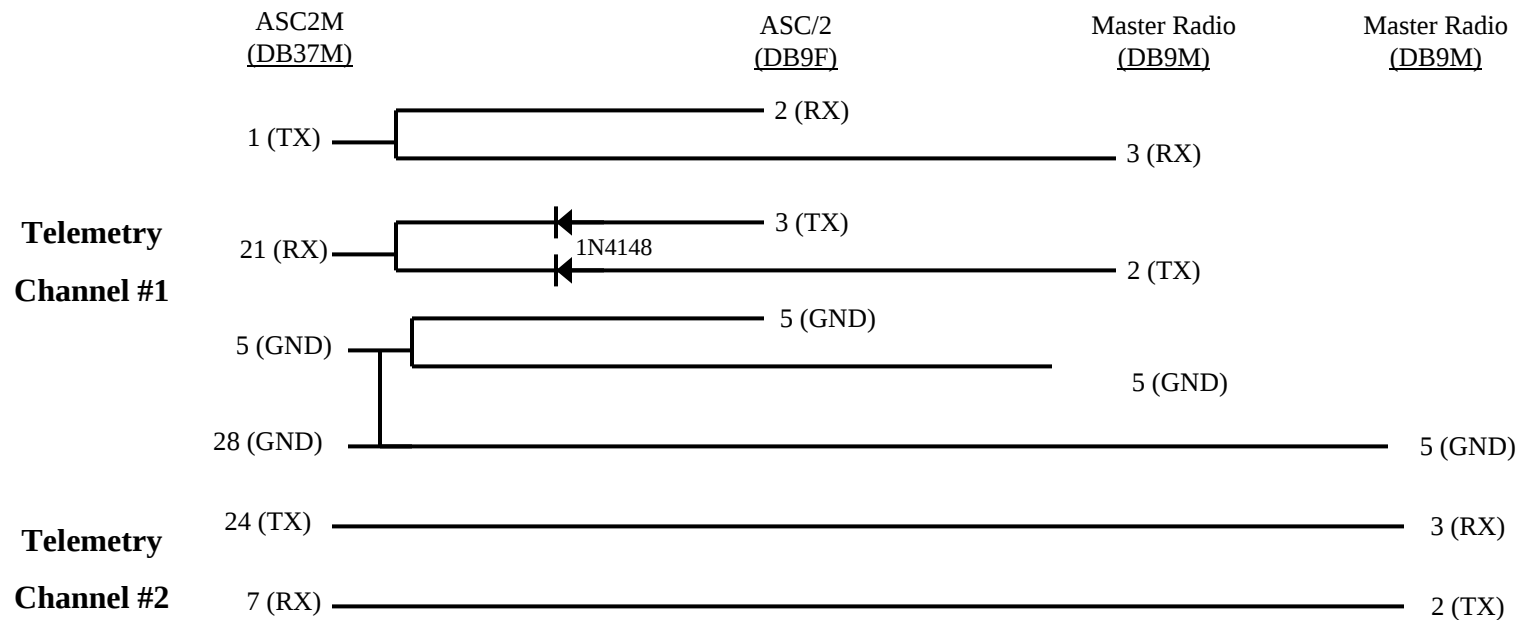

Notes


CH1 - ASC2M, co-located ASC2S and a Master Intuicom Radio

CH2 - ASC2M and a Master Intuicom Radio (only)

Remote Cabinet

RS232 Cable (Local Cabinet Pin-out)

**ASC2S
(DB9F)**

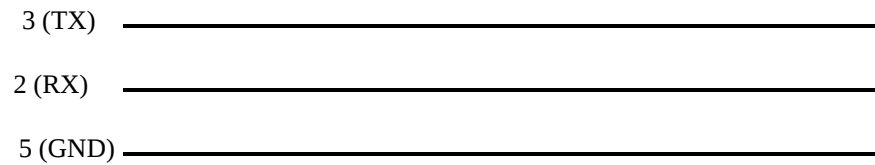

**Radio
(DB9M)**